





## PROCOOL SP640 SERIES TEMPERATURE CONTROLLED COOLING SYSTEMS

Intake Models: SP640X, SP640TV

Exhaust Models: SP640X-E, SP640TV-E



Model No.	SP640X, SP640X-E Quiet Operation	SP640TV, SP640TV-E High Airflow
		
Panel Size:	1U (19" w x 1.75" h x 2" d)	1U (19" w x 1.75" h x 2" d)
Panel color/material:	Black/metal	Black/metal
Fan Size:	40mm x 40mm x 20mm	40mm x 40mm x 2mm
Number of Fans:	6	6
Fan Speed (per fan):	3200 RPM	5000 RPM
Air Flow Direction	INTAKE (*E = EXHAUST)	INTAKE (*E = EXHAUST)
Air Flow (combined):	36 CFM	48 CFM
Static Pressure (per fan):	-	2.66mm H <sub>2</sub> O
Noise (combined):	21.77 dBA	30.78 dBA
Thermistor Probe length	n/a	n/a
Grills/Guards:	Black Wire	Black Wire
Bearings:	Fluid Dynamic	Dual Ball Bearings
Power Supply:	100-240 VAC - 12 VDC	100-240 VAC - 12 VDC
Power Supply Plug:	NEMA 1-15P – 2.1mm	NEMA 1-15P – 2.1mm
Power Supply Cable:	36"	36"
Current draw:	0.18A	0.42A
Power consumption:	2.16w	5.04w
Weight	2 lbs.	2 lbs.
Operating Temperature	14 ~ 158°F (-10 ~ 70°C)	14 ~ 158°F (-10 ~ 70°C)
Storage Temperature:	-40 ~ 158°F (-40 ~ 70°C)	-40 ~ 158°F (-40 ~ 70°C)
Fan Model	SX40	TV40
		



## Features:

- \* Control 4 fans individually with 4 temp zones
- \* Large Temperature display (Switchable- on or off)
- \* Switch between Fahrenheit and Celsius easily.
- \* Switches from thermal control to always on mode
- \* Programmable from 32-212°F (0-100 Celsius)
- \* 32" thermal probe (48" Extensions are available separately)

Temperature probe



## Instructions:

### THERMAL PROBE:

Place the temperature probe where you want it to detect the temperature. It can be left as is on the panel for an ambient temp. Or it can be placed at the top of a cabinet or above a hot component. Try to avoid placing the probe where the fans will blow directly on it. For best results, locate the probe where it will detect the most heat.

### PROGRAM:

Press the PROGRAM button to set the on and off temperatures for each of the 4 zones. Press the PROGRAM button to begin. All LED's will blink indicating programming for Global Mode. All Zones will operate with the same temperature. Press PROGRAM again to toggle between Zones 1 through 4. The LED for the selected zone will blink. To exit program mode press PROGRAM until all LED's stop blinking. Settings will be automatically saved.

### START / STOP:

While in the selected PROGRAM mode, press the START button to set the temperature where the fans should start. Use the UP and DOWN buttons to change the temperature. Then press the DOWN button to set the temperature where the fans should stop.

Hold START and STOP together for 3 seconds to switch to Always On mode which bypasses temperature control. The screen will display bp for bypass mode. The fans will continue to run until switched back to temperature mode or powered off.

### UP - C/F - Display:

Press the UP button to toggle between Celsius "C" or Fahrenheit "F" (when NOT in Programming mode)  
Press and hold the UP button for 3 seconds to enter DARK mode. The indicator lights and display will shut off. The controller will still function as normal. Repeat to turn the display back on.

### DOWN:

Used only for setting temperature in programming mode.

### HEATING FUNCTION:

Set the START temperature lower than the STOP temperature. The controller will run until the stop temperature is reached and the environment is heated to the set temperature.